

Kawasaki Motors Corp., U.S.A.


Irvine, California 92718-2016

VOYAGER FORK LEG LIGHTS K53002-022B

QTY	PN	DESCRIPTION
4	303163	10 x 1.25 x 45mm HEX HEAD CAP SCREW, PLATED
4	301148	3/8 x 3/4 x .030" FLATWASHER, PLATED
1	950018	VOYAGER FORK LIGHT HARNESS
1	530004	SPLICE BLOCK
6	307003	1/8 x 4" BLACK ZIP-TIE
1	930701	VOYAGER FORK LIGHT ASSEMBLY LH
1	930702	VOYAGER FORK LIGHT ASSEMBLY RH

PLEASE READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

1. PLACE YOUR MOTORCYCLE ON ITS CENTERSTAND. LOCATE AND REMOVE THE FOUR 10mm BOLTS (TWO ON EACH SIDE) THAT FASTEN THE BRAKE CALIPERS TO THE FORK LEGS. LET THE CALIPERS HANG BY THEIR HOSES FOR NOW.
2. USING THE NYLON ZIP-TIES PROVIDED, FASTEN THE WIRE HARNESS TO THE BRAKE LINES ON EACH SIDE OF THE FORK. THE WIRE JUNCTION OF THE HARNESS SHOULD BE FASTENED TO THE BRAKE LINE JUNCTION, LOCATED DIRECTLY UNDER THE TRIPLE CLAMP. THE TWO BRANCH WIRES WILL FOLLOW THE BRAKE LINES DOWN TOWARD THE CALIPERS. ROUTE THE SINGLE WIRE LEAD UP PAST THE STEERING HEAD AND INTO THE FAIRING. SEE FIGURE ONE.

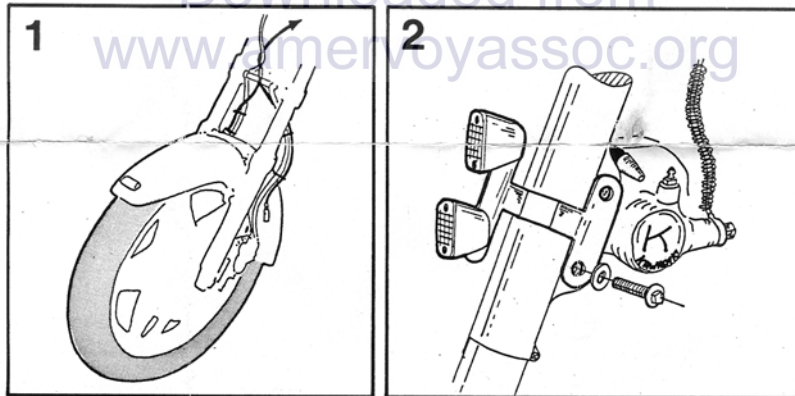

3. REMOVE THE HEADLIGHT ASSEMBLY FROM THE FAIRING. ON VOYAGER XII, REMOVE THE HEADLIGHT COVER (FASTENED BY TWO SCREWS LOCATED DIRECTLY UNDER THE HEADLIGHT), AND THEN REMOVE THE HEADLIGHT ASSEMBLY (FASTENED WITH FOUR 6mm BOLTS). FOR VOYAGER 1300, REMOVE THE FOUR PHILLIPS HEAD SCREWS (ONE AT EACH CORNER OF THE HEADLIGHT), AND THEN REMOVE THE ASSEMBLY. LOCATE THE DUAL FEMALE CONNECTOR ON THE END OF THE WHITE WITH YELLOW STRIPE WIRE (VOYAGER XII), WHITE WITH BLUE STRIPE (VOYAGER 1300). ROUTE THE END OF THE SINGLE LEAD FROM THE FORK LIGHT HARNESS INTO THE HEADLIGHT CAVITY AND PLUG IT INTO THE FEMALE CONNECTOR. REINSTALL THE HEADLIGHT ASSEMBLY WITH THE STOCK HARDWARE.
NOTE: IF ACCESSORIES ARE ALREADY PLUGGED INTO THE WHITE WIRE, CUT THE MALE BULLET OFF THE FORK LIGHT HARNESS AND SPLICE IT INTO THE WHITE WIRE USING THE SPLICE BLOCK PROVIDED.

4. POSITION THE FORK LIGHT ASSEMBLIES ON THE FORK LEGS AS SHOWN IN FIGURE TWO, AND FASTEN WITH THE 10 x 45mm BOLTS AND FLATWASHERS PROVIDED, TIGHTEN EACH OF THE FOUR BOLTS TO 24 FT/LBS OF TORQUE. PLUG THE MALE BULLET ON THE FORK LIGHT ASSEMBLIES INTO THE FEMALES ON THE WIRE HARNESS, AND CHECK THE LIGHTS FOR PROPER OPERATION. INSTALLATION IS NOW COMPLETE.

NOTE: IF YOU ALREADY HAVE VOYAGER CALIPER COVERS ON YOUR BIKE, OR IF YOU ARE MOUNTING THEM IN CONJUNCTION WITH THE FORK LIGHTS, NOTE THAT THE FORK LIGHT BRACKET REPLACES THE 1/8" THICK SPACERS THAT NORMALLY FIT BENEATH THE CALIPER COVER MOUNT BRACKET.

REV JUNE 1992
MI 070150

ACCESSORIES

FORM 65A001-00A