


IRVINE, CALIFORNIA 92718-2016

VOYAGER XII REAR FENDER EXTENSION PN K53002-027

<u>QTY</u>	<u>PN</u>	<u>DESCRIPTION</u>
2	304177	10-24 x 1/2" CARRIAGE BOLT, CHROME
2	302511	10-24 KEPS NUT, PLATED
1	470970	ZG1200 REAR FENDER EXTENSION, CHROME

1. PLACE YOUR MOTORCYCLE ON ITS CENTERSTAND. POSITION THE CHROME FENDER EXTENSION ON THE STOCK REAR FENDER, LOCATED BELOW THE TAIL LIGHT IN THE SADDLEBAG CENTER SECTION.
2. CENTER THE EXTENSION ON THE FENDER AND MAKE SURE IT IS LEVEL, AND THEN MARK THE LOCATION OF THE MOUNTING HOLES. REMOVE THE EXTENSION FROM THE FENDER.

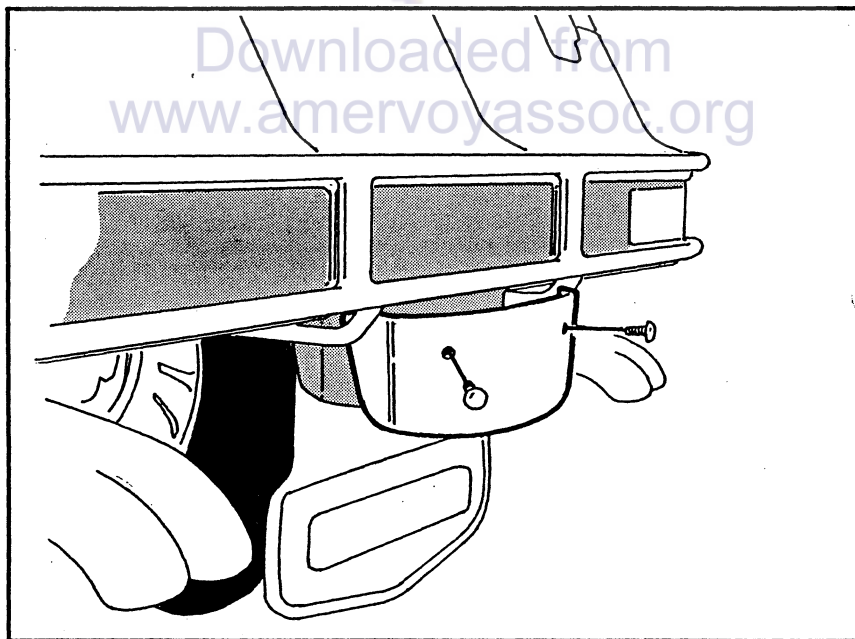

3. USING A 7/32" BIT, DRILL A HOLE AT EACH MARKED LOCATION. LIGHTLY DEBURR BOTH SIDES OF THESE TWO HOLES, AND THEN INSTALL THE EXTENSION, USING THE #10 CARRIAGE BOLTS AND KEPS NUTS PROVIDED. TIGHTEN BOTH NUTS SECURELY AND INSTALLATION IS COMPLETE.

APRIL 1987

## ACCESSORIES