

Kawasaki Motors Corp., U.S.A.


Irvine, California 92718-2016

VOYAGER CHROME CALIPER COVERS PN K53002-020A

QTY	PN	DESCRIPTION
4	303164	10 x 1.25 x 50mm HEX HEAD CAP SCREW, PLATED
4	301148	3/8 x 3/4 x .030" FLATWASHER, PLATED
4	560010	13/32 x 3/4 x 1/8" SPACER, PLATED
4	304160	8-32 x 3/8" PHILLIPS PANHEAD SCREW, PLATED
4	770070	13mm SNAPCAP, CHROME
4	770075	13mm SNAPCAP WASHER
1	960532	VOYAGER CALIPER COVER ASSEMBLY, LH
1	960533	VOYAGER CALIPER COVER ASSEMBLY, RH
1	660235	VOYAGER CALIPER COVER MOUNT WELDMENT LH, BPC
1	660240	VOYAGER CALIPER COVER MOUNT WELDMENT RH, BPC

PLEASE READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

1. PLACE YOUR MOTORCYCLE ON ITS CENTERSTAND. LOCATE AND REMOVE THE FOUR 10mm BOLTS (TWO ON EACH SIDE) THAT FASTEN THE BRAKE CALIPERS TO THE FORK LEGS. LET THE CALIPERS HANG BY THEIR HOSES FOR NOW.
2. POSITION THE LEFT AND RIGHT MOUNTING WELDMENTS ON THE FORK LEGS AS SHOWN. REPOSITION THE CALIPERS, AND THEN FASTEN CALIPER AND MOUNT WITH THE 10 x 50mm BOLTS, 3/8" FLATWASHERS, AND 1/8" SPACERS PROVIDED. TIGHTEN THESE FOUR BOLTS SECURELY (3.3 KG-M, 24 FT/LBS).

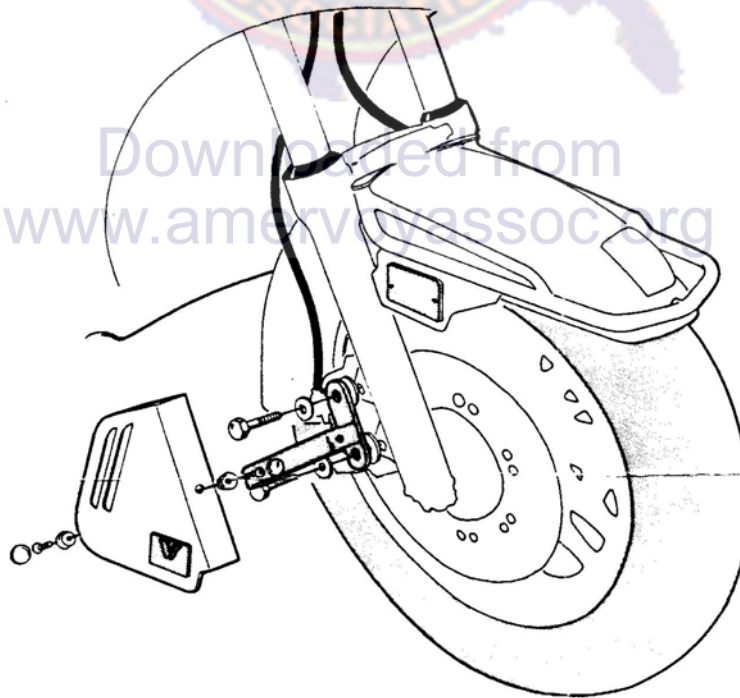

3. POSITION THE LEFT AND RIGHT CALIPER COVERS ON THE MOUNTS AS SHOWN, AND THEN FASTEN WITH THE 8-32 SCREWS AND SNAPCAP WASHERS PROVIDED. TIGHTEN THESE SCREWS SECURELY AND THEN INSTALL THE CHROME SNAPCAPS. INSTALLATION IS NOW COMPLETE.

NOTE: IF YOU ALREADY HAVE VOYAGER FORK LEG LIGHTS ON YOUR BIKE, OR IF YOU ARE MOUNTING THEM IN CONJUNCTION WITH THE CALIPER COVERS, NOTE THAT THE FORK LIGHT BRACKET REPLACES THE 1/8" THICK SPACERS THAT NORMALLY FIT BENEATH THE CALIPER COVER MOUNT BRACKET.

DECEMBER 1987 REV
MI 060394

ACCESSORIES

FORM 65A001 004