

Kawasaki Motors Corp., U.S.A.


Irvine, California 92718-2016

VOYAGER XII FAIRING AND SADDLEBAG ACCENTS PN K53002-024

<u>QTY</u>	<u>PN</u>	<u>DESCRIPTION</u>
8	304510	#8 x 3/8" PHILLIPS PANHEAD TYPE B SELF-TAPPING SCREW, PLATED
8	770070	13mm SNAPCAP, CHROME
8	770075	13mm SNAPCAP WASHER
1	471005	LH SADDLEBAG ACCENT, CHROME
1	471010	RH SADDLEBAG ACCENT, CHROME
1	471015	LH FAIRING ACCENT, CHROME
1	471020	RH FAIRING ACCENT, CHROME

NOTE: PLEASE READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

1. PLACE YOUR MOTORCYCLE ON ITS CENTERSTAND. NO PARTS NEED TO BE REMOVED FROM THE BIKE BEFORE INSTALLATION OF THE ACCENT PLATES CAN BEGIN.
2. POSITION THE RIGHTHAND SADDLEBAG ACCENT PLATE AGAINST THE BAG AS SHOWN IN FIGURE ONE. CENTER THE PLATE VERTICALLY, AND MAKE SURE THE CURVED LEADING EDGE IS ALL THE WAY BACK AGAINST THE BAG. USING A PENCIL, MARK THE TWO MOUNT HOLE LOCATIONS, AND THEN REMOVE THE ACCENT.

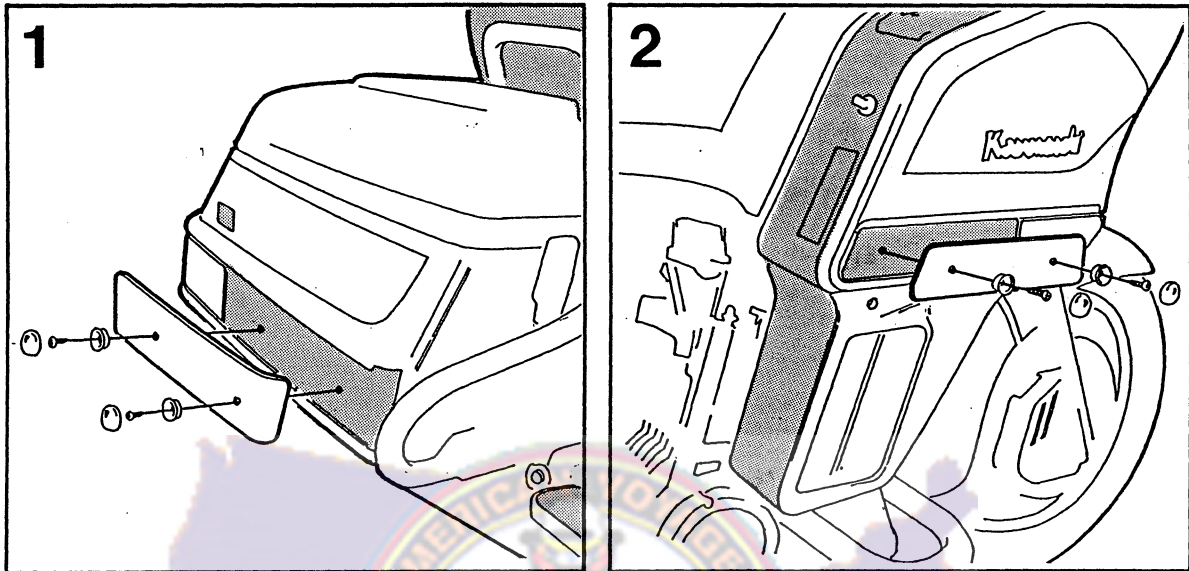

3. DRILL A 9/64" HOLE AT EACH MARKED LOCATION, AND THEN LIGHTLY DEBURR THE HOLES' EDGES. FASTEN THE ACCENT PLATE TO THE SADDLEBAG USING TWO OF THE #8 SCREWS AND SNAPCAPS PROVIDED. TIGHTEN THESE SCREWS JUST TILL SNUG.
4. REPEAT STEPS TWO AND THREE FOR THE LEFTHAND SADDLEBAG PLATE, AND THEN LOCATE AND MOUNT THE FAIRING ACCENTS IN SIMILAR FASHION (FIGURE TWO). MAKE SURE ALL FASTENERS ARE SNUG, INSTALL THE CHROME SNAPCAPS, AND INSTALLATION IS COMPLETE.

Downloaded from
www.amervoyassoc.org

JUNE 1987 070168

ACCESSORIES

FORM 65A001-00A