


VOYAGER XII CHROME LICENSE PANEL PN K53002-028

<u>QTY</u>	<u>PN</u>	<u>DESCRIPTION</u>
2	304510	#8 x 3/8" PHILLIPS PANHEAD SELF-TAPPING SCREW, TYPE B
2	770070	13mm SNAPCAP, CHROME
2	770075	13mm SNAPCAP WASHER
1	470960	LICENSE PANEL, CHROME

1. PLACE YOUR MOTORCYCLE ON ITS CENTERSTAND. REMOVE THE LICENSE PLATE FROM THE BIKE, AND THEN CAREFULLY SLIDE THE CHROME PANEL INTO PLACE ON THE STOCK CENTER SECTION.
2. USING A PENCIL, MARK THE LOCATION OF THE TWO MOUNTING HOLES IN THE CHROME PANEL. REMOVE THE PANEL, AND THEN DRILL A 9/64" HOLE IN EACH MARKED LOCATION. LIGHTLY DEBURR THESE TWO HOLES.

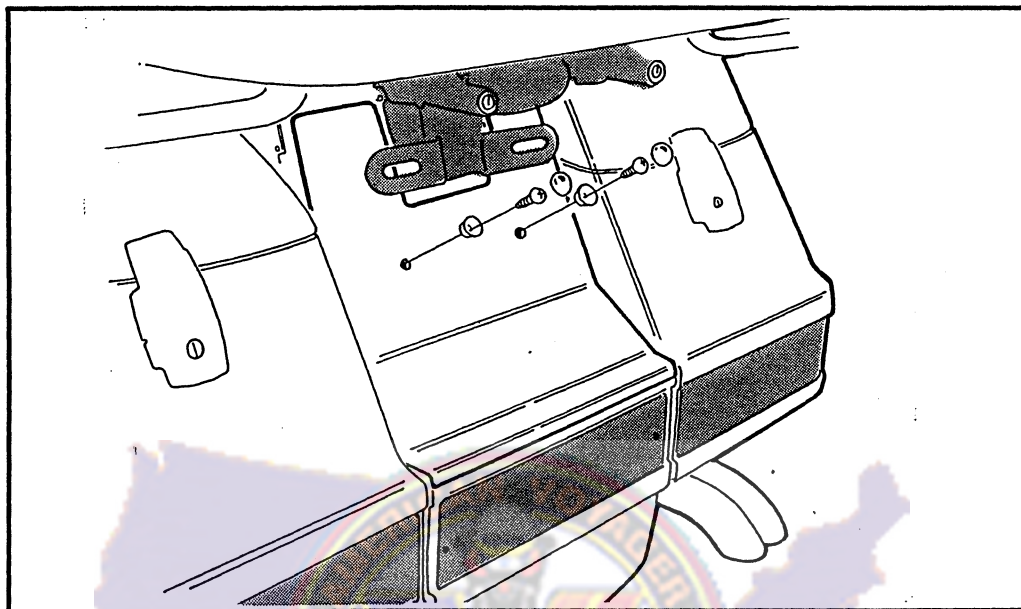

3. REINSTALL THE CHROME PANEL ON THE STOCK CENTER SECTION, AND THEN FASTEN WITH THE #8 SCREWS AND SNAPCAP WASHERS PROVIDED. TIGHTEN JUST TILL SNUG, AND THEN INSTALL THE CHROME SNAPCAPS. REINSTALL THE LICENSE PLATE AND INSTALLATION IS COMPLETE.