

# Kawasaki Motors Corp., U.S.A.


Irvine, California 92718-2014

VOYAGER XII MIRROR VISORS PN K53002-029

| QTY | PN     | DESCRIPTION   |
|-----|--------|---|
| 4   | 30450V | #2 x 3/8" PHILLIPS PANHEAD SELF-TAPPING SCREW, PLATED |
| 2   | 97054S | Z61200 MIRROR VISOR ASSEMBLY                          |

**NOTE:** PLEASE READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

1. PLACE YOUR MOTORCYCLE ON ITS CENTERSTAND. POSITION ONE OF THE VISORS ON THE LEFT HAND MIRROR, AND THEN ALIGN THE EDGES AND SIDES AS SHOWN.
2. PUSH DOWN ON THE CORNERS OF THE VISOR SO THAT IT SITS FLAT ON THE TOP OF THE MIRROR ( THAT IS, SO IT MATCHES THE CURVE OF THE MIRROR TOP), AND THEN MARK THE LOCATIONS OF THE MOUNTING HOLES ONTO THE MIRROR BODY. REMOVE THE VISOR FROM THE MIRROR.

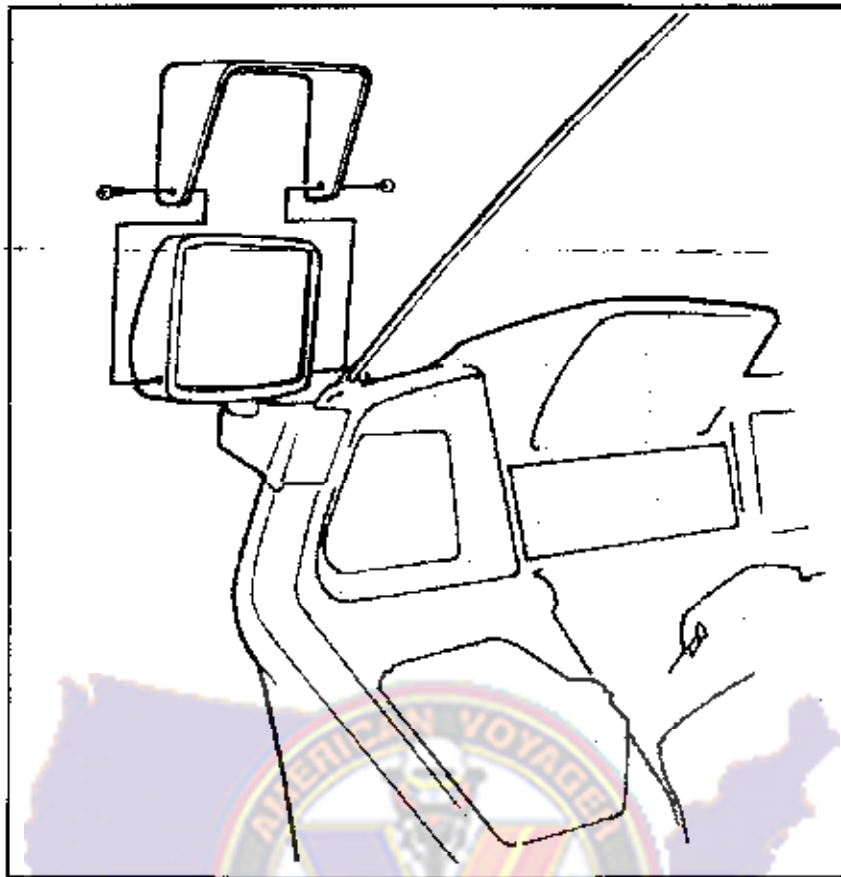

3. USING A 1/16" DRILL BIT, DRILL A HOLE AT EACH OF THE TWO MARKED LOCATIONS. LIGHTLY DE-BURR THESE TWO HOLES.
4. PEEL THE WHITE BACKING FROM THE ADHESIVE INSIDE THE VISOR, AND THEN CAREFULLY POSITION THE VISOR ON THE MIRROR BODY. PUSH DOWN AGAIN ON THE CORNERS TO ENSURE GOOD ADHESION, AND THEN FASTEN WITH THE SUPPLIED #2 SCREWS. TIGHTEN JUST TILL SNUG.
5. REPEAT STEPS ONE THROUGH FOUR FOR THE RIGHT HAND MIRROR AND INSTALLATION IS COMPLETE.

JUNE 1987 070173

## ACCESSORIES

Downloaded from

[www.amervoyassoc.org](http://www.amervoyassoc.org)

FORM 00001 001