


# Kawasaki Motors Corp., U.S.A.

Irvine, California 92718-2016

VOYAGER XII PASSENGER BOARD ACCENT PLATES PN K53002-025

QTY	PN	DESCRIPTION
4	770071	16mm SNAPCAP, CHROME
4	770076	16mm SNAPCAP WASHER
4	304501	#10 x 1/2" B TYPE SELF-TAPPING SCREW, PLATED
1	970532	LH ACCENT PLATE ASSEMBLY
1	970533	RH ACCENT PLATE ASSEMBLY

1. PLACE YOUR MOTORCYCLE ON ITS CENTERSTAND. FOLD THE PASSENGER BOARDS TO THE "UP" POSITION. THE ACCENT PLATES MAY BE INSTALLED WITH THE PASSENGER BOARDS ON THE BIKE.
2. POSITION THE LEFT-HAND ACCENT PLATE ON THE LEFT-HAND PASSENGER BOARD AS SHOWN, CAREFULLY ALIGNING THE EDGES. WITH A PENCIL, MARK THE POSITION OF THE TWO MOUNTING HOLES THROUGH THE ACCENT PLATE ONTO THE LUGS ON THE PASSENGER BOARD.

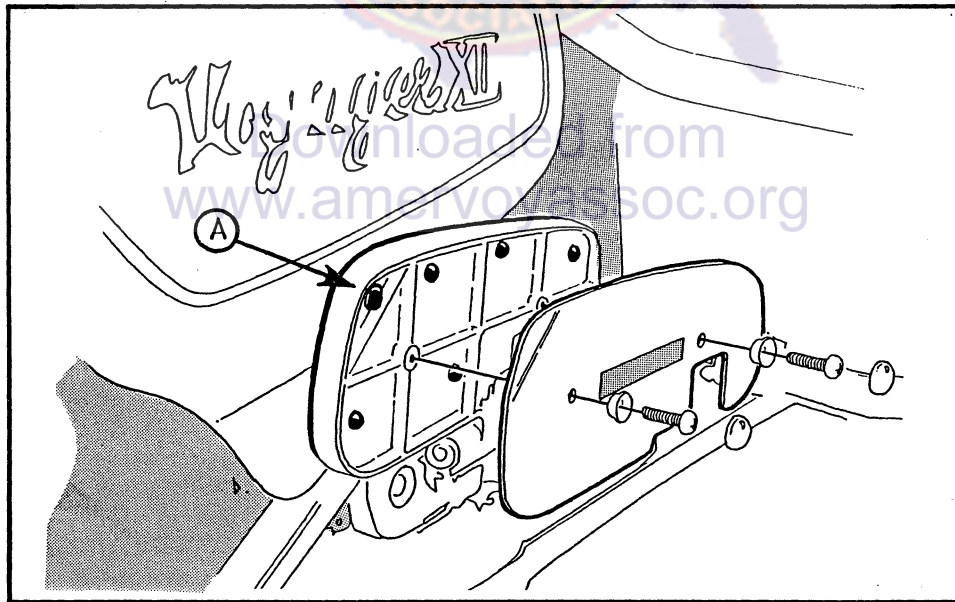

3. USING A 5/32" BIT, DRILL A HOLE AT EACH OF THE MARKED LOCATIONS. BE CAREFUL NOT TO DRILL THROUGH THE FLOORBOARD RUBBER MAT.
4. GRIND OR FILE OFF BOSS INDICATED AT (A) TO ALLOW PROPER FIT OF ACCENT PLATE.
5. INSTALL THE LEFT-HAND ACCENT PLATE ON THE PASSENGER BOARD, USING THE #10 SCREWS AND SNAPCAPS. TIGHTEN SECURELY. REPEAT STEPS TWO, THREE, AND FOUR FOR THE RIGHT-HAND FLOORBOARD AND INSTALLATION IS COMPLETE.

REV NOVEMBER 1991  
MI 070169

## ACCESSORIES

FORM 65A001-00A